


INSTRUCTION MANUAL SEMI VERTICAL DISPLAYS

3335639-NR, 3335640-NR, 3335641-NR, 3335642-NR, 3335643-NR,
3335644-NR, 3335645-NR, 3335646-NR, 3335647-NR, 3335648-NR.

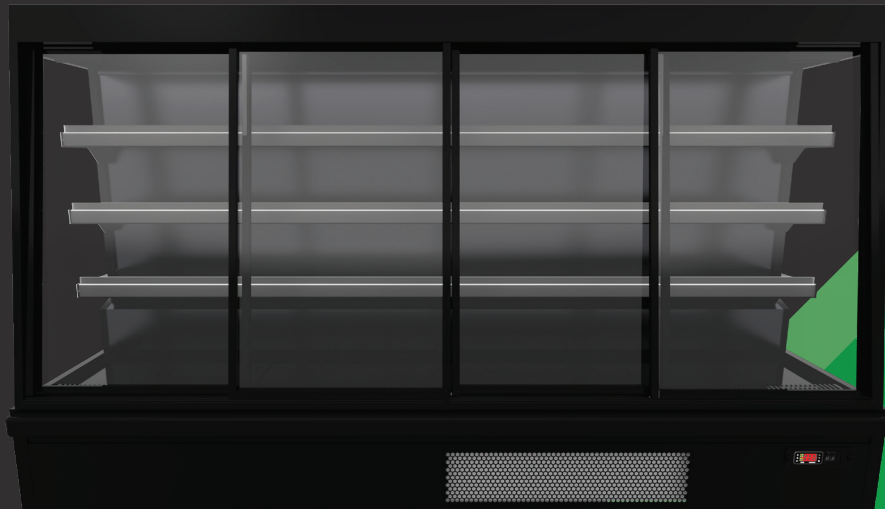

CONTENTS

1. PREFIX	4
2. IMPORTANT NOTES & WARNINGS	5
3. PACKAGING AND HANDLING	6
4. PRODUCT OVERVIEW	7
5. INSTALLATION	9
6. OPERATION	11
7. PRODUCT LOADING AND STORAGE	12
8. MAINTENANCE	12
9. TROUBLESHOOTING	14
10. MULTIPLEXING PROCEDURE	15
11. ALTERNATE CONFIGURATIONS	16
12. ENVIRONMENTAL AND DISPOSAL NOTES	17
13. WARRANTY	18

Note: Bromic Refrigeration reserves the right to make changes to specifications, parts, components and equipment without prior notification. This Installation, operation and service manual may not be reproduced in any form with prior written consent from Bromic Refrigeration.

1. PREFIX

This manual contains important information about the installation, operation, and maintenance of Bromic Semi Vertical Display units. Please pay close attention to the important safety information shown throughout this instruction manual. Any safety information will be accompanied by the following safety alert symbols:

 DANGER,  WARNING,  IMPORTANT

- READ THIS MANUAL CAREFULLY before installing or servicing this product.
- Improper installation, operation, or maintenance can result in death, severe injury, or property damage.
- Improper installation, operation, or maintenance may also result in warranty being voided.
- This appliance is intended for 230-240 Volt power supply.
- Installation MUST be carried out by a licensed and authorised technician in accordance with local electrical codes.
- Installation and maintenance MUST be carried out as per instruction, by a qualified technician in accordance with local regulation.

2. IMPORTANT NOTES AND WARNINGS


- Read all instructions before installing or using this appliance
- Retain this manual for future reference
- Use this appliance only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury.
- Improper installation, adjustment or alteration and failure to follow the warnings and instructions in this manual could result in severe personal injury, death or property damage
- The manufacturer is not responsible for any damage that could happen from improper use. The manufacturer emphasises that this appliance should be used in a responsible manner and that all procedures, warnings, and safety instructions contained in this booklet be followed strictly.
- Check the appliance for damage. Do not operate a damaged unit.
- Check for damage to the appliance regularly. If damage to the appliance is suspected, discontinue use immediately and contact the supplier or qualified person to repair.
- This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible of their safety.
- Keep packaging material out reach of children
- Children should be carefully supervised to ensure that they do not play with the appliance
- Do not attempt to alter the appliance in any manner.
- Please pay attention to the maximum load limit when filling the shelves.
- All work on electrical equipment must be carried out by a qualified and licensed technician only.
- Do not perform maintenance until the appliance has been turned off and power disconnected.
- Never detach any cover except where specifically instructed in this manual. Doing so might expose live electrical parts.
- Do not operate the appliance with panels, covers or guards removed.
- Keep the air intake and outlets free of obstructions.
- Do not use the appliance outdoors.
- If the supply cord becomes damaged, it must be replaced by an authorised service agent or similarly qualified person in order to avoid a hazard.
- If the appliance has not been used, or will not be used for a long period of time, disconnect power supply.
- The appliance must be installed in accordance to AS1677.2:1998 to ensure there are no sources of ignition any area where refrigerant could gather in the event of a leak.
- Electrical equipment should not be placed under the unit or where refrigerant could gather in the event of a leak.
- Installation/servicing of the appliance must be performed by a licensed technician with Gas Work Authorization if the appliance gas system is being opened or charged.
- The refrigerant used in all appliances covered by this manual are flammable.



Caution
Risk of fire

3. PACKAGING AND HANDLING

- This Semi Vertical display contains fragile glass. The unit must always be handled with care.
- Adjust the width of forklift tines such that they line up with the structural supports on the Semi Vertical unit before lifting.
- The Semi Vertical unit must always be handled on flat and level ground.
- Take care not to damage the castors, while inserting forklift tines into the pallet.

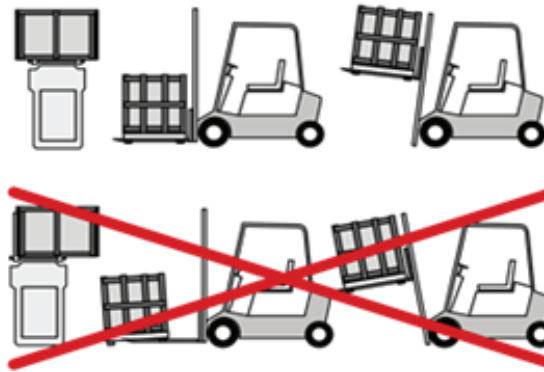

4. PRODUCT OVERVIEW

		SVM1000HD-NR	SVM1250HD-NR	SVM1580HD-NR	SVM1875HD-NR	SVM2500HD-NR
Part Number		3335639-NR	3335640-NR	3335643-NR	3335641-NR	3335642-NR
External Dimension	Height, mm	1500	1500	1500	1500	1500
	Width, mm	1022	1334	1580	1959	2584
	Depth, mm	825	825	825	825	825
Volume	Litres	332	443	559	664	885
Weight	Kg	165	190	220	240	290
Air Circulation	Type	Fan Forced	Fan Forced	Fan Forced	Fan Forced	Fan Forced
Climate Class	Rating	3M1	3M1	3M1	3M1	3M1
Temperature	Range	-1°C to +10°C	-1°C to +10°C	-1°C to +10°C	-1°C to +10°C	-1°C to +10°C
	Type	Digital	Digital	Digital	Digital	Digital
Exterior	Material	Stainless Steel	Stainless Steel	Stainless Steel	Stainless Steel	Stainless Steel
Interior	Material	Stainless Steel	Stainless Steel	Stainless Steel	Stainless Steel	Stainless Steel
Colour	Default	Black	Black	Black	Black	Black
Electrical	Voltage, V	220-240V	220-240V	220-240V	220-240V	220-240V
	Frequency, Hz	50	50	50	50	50
	Current, A	2.52	2.53	1.48	3.60	3.66
Energy Consumption	kWh/24h	2.6	3.1	4.1	4.6	6.9
Internal Light	Type	LED	LED	LED	LED	LED
Shelves	Qty	3 plus base	3 plus base	3 plus base	3 plus base	3 plus base
Door	Solid/Glass	Glass	Glass	Glass	Glass	Glass
	Style	Hinged	Hinged	Hinged	Hinged	Hinged
	Self-Closing	Yes	Yes	Yes	Yes	Yes
	Door Lock	No	No	No	No	No
Door Swing Dimension	mm	469	625	748	469	625
Total Depth of Door Open	mm	1259	1415	1538	1259	1415
Refrigeration	Refrigerant	R290	R290	R290	R290	R290
Plug	Supplied	10A	10A	10A	10A	10A
	Location	Rear	Rear	Rear	Rear	Rear
	Cord Length, m	2	2	2	2	2
Castors	Available	Yes	Yes	Yes	Yes	Yes


		SVM1000SD-NR	SVM1250SD-NR	SVM1580SD-NR	SVM1875SD-NR	SVM2500SD-NR
Part Number		3335639-NR	3335640-NR	3335643-NR	3335641-NR	3335642-NR
External Dimension	Height, mm	1500	1500	1500	1500	1500
	Width, mm	1022	1334	1580	1959	2584
	Depth, mm	825	825	825	825	825
Volume	Litres	332	443	559	664	885
Weight	Kg	165	190	220	240	290
Air Circulation	Type	Fan Forced	Fan Forced	Fan Forced	Fan Forced	Fan Forced
Climate Class	Rating	3M1	3M1	3M1	3M1	3M1
Temperature	Range	-1°C to +10°C	-1°C to +10°C	-1°C to +10°C	-1°C to +10°C	-1°C to +10°C
	Type	Digital	Digital	Digital	Digital	Digital
Exterior	Material	Stainless Steel	Stainless Steel	Stainless Steel	Stainless Steel	Stainless Steel
Interior	Material	Stainless Steel	Stainless Steel	Stainless Steel	Stainless Steel	Stainless Steel
Colour	Default	Black	Black	Black	Black	Black
Electrical	Voltage, V	220-240V	220-240V	220-240V	220-240V	220-240V
	Frequency, Hz	50	50	50	50	50
	Current, A	2.6	3.1	1.48	3.60	3.66
Energy Consumption	kWh/24h	2.6	3.1	4.1	4.6	6.9
Internal Light	Type	LED	LED	LED	LED	LED
Shelves	Qty	3 plus base	3 plus base	3 plus base	3 plus base	3 plus base
Door	Solid/Glass	Glass	Glass	Glass	Glass	Glass
	Style	Sliding	Sliding	Sliding	Sliding	Sliding
	Self-Closing	No	No	No	No	No
	Door Lock	No	No	No	No	No
Refrigeration	Refrigerant	R290	R290	R290	R290	R290
Plug	Supplied	10A	10A	10A	10A	10A
	Location	Rear	Rear	Rear	Rear	Rear
	Cord Length, m	2	2	2	2	2
Castors	Available	Yes	Yes	Yes	Yes	Yes

5. INSTALLATION

Locating the Cabinet

Ensure the following instructions are observed as this is vital for proper and trouble-free operation.

- Do not install the cabinet outdoors.
- Locate the appliance in a dry and well ventilated place.
- The unit must be positioned on a level surface.
- Do not install in the vicinity of heating radiators or other heat sources.
- Do not install the appliance where it is exposed to direct sunlight.
- Do not install the appliance where it is exposed to warm draughts or open doors.
- Keep the air intake and outlets free of obstructions.
- Adequate allowance should be made for door openings.

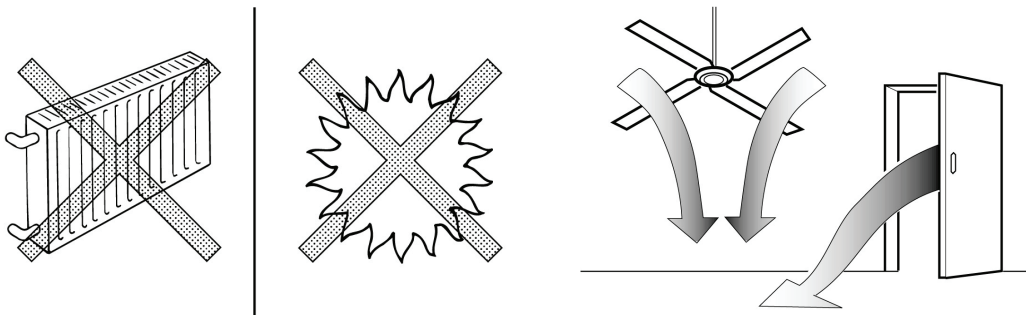

Ventilation


- Ensure that the condenser fan is free to take in ambient air from the room.
- Ensure the vents on top of the cabinet are clear at all times to disperse warm air



NOTE: The maximum ambient temperature for the refrigerator is 30°C. Conditions outside this temperature will result in cabinet temperatures outside the required 2 to 8°C range. Bromic recommends that the refrigerator is installed at an ambient temperature of 20 to 25°C.

Power Supply

- The appliance must not be plugged into a multiple outlet power board.
- The appliance is supplied with a flexible power cord fitted with a 3-pin plug.
- The socket used must be properly earthed and fuse/RCD protected.
- See the rating label inside the cabinet for supply voltage, frequency and current draw.
- Power cable is rated 70°C. It is recommended that the cable should not come into contact with parts over 50°C.
- Do not turn off power before consulting the person responsible.
- Mark the power source clearly, so the refrigerator is not unplugged or turned off accidentally.

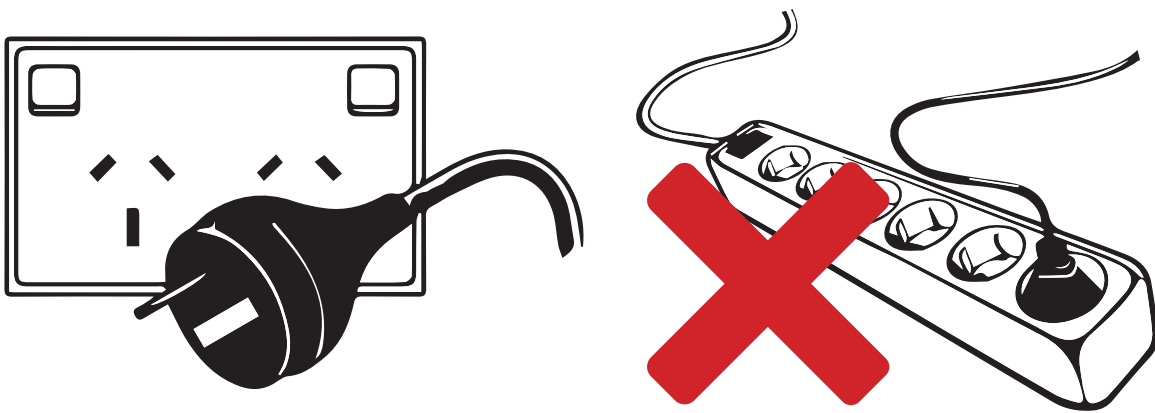

Before Operating

- If the appliance has been sharply tilted or transported in the horizontal position, it must be left to stand in the upright position and not plugged in for at least 4 hours.
- Remove all the packaging material before using the appliance.
- Start the appliance only if it has been installed as described.

6. OPERATION

Start-up

- Connect the appliance to the mains power supply.
- The switches (image below) control cabinet cooling, defrost, and lights respectively. Flip all switches on for cabinet operation.
- The compressor and condenser fan should operate within 3 minutes after the Refrigeration switch is turned on.
- The electronic controller will display the current cabinet temperature after the Refrigeration switch is turned on.
- The ❄️ LED indicates that refrigeration circuit is operating.
- During the start-up delay (3 minutes), the ❄️ LED is flashing
- The ❄️ LED indicates that the refrigeration circuit is defrosting

Setting the temperature



- Press the **SET** button for more than 3 seconds.
- The value of the set point will be displayed and the '°C' or '°F' LED starts blinking.
- Press ▲ or ▼ arrow key within 10 seconds to adjust the set point.
- Press the **SET** key again or wait 10 seconds.

Cabinet Cooling On/Off



Cabinet Lighting On/Off

7. PRODUCT LOADING AND STORAGE



IMPORTANT: Run the refrigerator for at least 2 hours before loading.



WARNING: Do not store explosive substances such as aerosol cans with a flammable propellant inside the appliance.

Start-up

- Clean the interior surface with a soft cloth and warm water before loading.
- Ensure there is free circulation of air between the products.
- Do not block the evaporator fan.
- Keep refrigerator door openings to a minimum.
- Some products are sensitive to ultraviolet (UV) light, please see storage guidelines from the manufacturer before removing from packaging.
- Do not block the top or bottom grills when loading the cabinet. This can reduce cooling performance.
- Do not overstock the cabinet: goods touching the cabinet walls and glass will not cool properly.

NOTE: Bromic cannot be responsible for loss of stock or damage to stock.

8. MAINTENANCE



WARNING: Disconnect the appliance from the power supply before performing any maintenance. Never unplug the appliance by pulling on the cord. Always grasp the plug firmly and pull straight out of the outlet.



WARNING: Exposure to significant water ingress will void warranty and cause potential safety issues. If the unit should be exposed to water, please contact the manufacturer immediately.

IMPORTANT: Warranty may be void if there is no evidence of preventative maintenance is performed on the appliance.

Cleaning the Cabinet

- Remove the products and transfer to a suitable location prior to cleaning the inside of the cabinet.
- Do not use any aggressive or abrasive cleaning agents.
- Never use a water hose or a high-pressure jet to clean.
- Do not use sharp or pointed objects for cleaning.
- Clean the inside and outside of the appliance with a clean damp cloth or with a neutral cleanser.
- Dry all surfaces with a dry cloth.

Condenser Coil/Filter



IMPORTANT: The filter and the condenser coil must be cleaned once a month. The condenser coil must be cleaned with vacuum/brush monthly to maintain the performance and minimise power consumption. A poorly maintained condenser coil can lead to failure of the unit and higher cabinet temperatures.

General cleaning


- The Semi-Vertical display must be wiped down regularly.
- Preventing the build-up of oil and sediments will increase the longevity of the unit.

Condenser cleaning

- A clogged condenser can result reduced cooling performance.
- The condenser must be cleaned every 6 weeks.
- Recommended cleaning methods includes:
 - Vacuum cleaner
 - Cleaning brush
 - Compressed air

Drain hose cleaning

- The drainage hose must be kept clean and clear.
- A clogged drainage hose can cause the unit to leak.

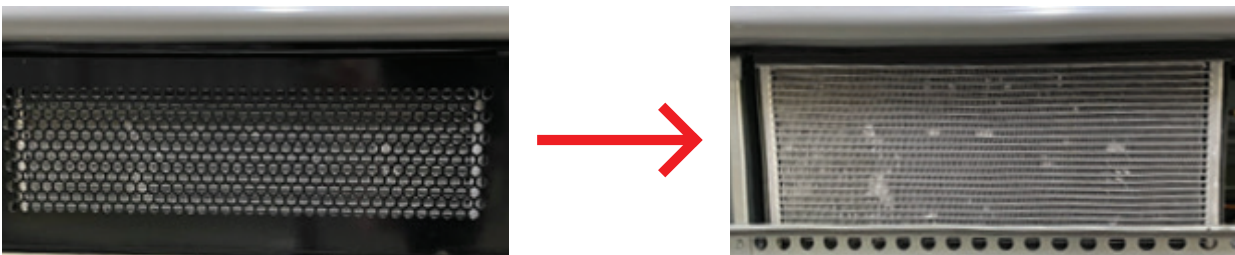

Remove front panel to access condenser. Ensure condenser is cleaned every 6 weeks.



Base panels can be removed to access the drain pipe.

9. TROUBLESHOOTING




IMPORTANT: Repairs on the unit must be carried out by an authorised and licensed person only. Contact the manufacturer or an approved service agent for any repairs needed.

Symptom	Possible Cause(s)	Solution
Cabinet does not turn on	A. No power supply	A. i. Check that switch is on ii. Try plugging cabinet into different power sockets iii. Check power plug and cord for damage
Cabinet temperature too high	A. Incorrect controller set point B. Ambient temperature too high C. Inadequate ventilation D. Dirty condenser unit E. Ice build-up on evaporator coil	A. Change controller set point B. Ensure unit is in an air-conditioned environment of 25C C. Keep ventilation slots clear D. Clean the condenser coil and drain pipe E. Ensure drain pipe is not clogged with oil or waste
Cabinet Temperature Too Low	A. Incorrect controller set point B. Ambient temperature too low C. Faulty evaporator probe	A. Change controller set point B. Ensure unit is in a temperature-controlled environment of 25C C. Contact Bromic service
Cabinet temperature greatly fluctuating	A. Cabinet is in direct sunlight or outdoors	A. Reposition cabinet such that it is not in direct sunlight or outdoors
Cabinet leaving water puddles on the ground	A. Cabinet glass is condensing and dripping B. Cabinet drip tray is overflowing	A. Ensure the cabinet is in an air-conditioned environment of 25C and 60% RH B. Contact Bromic service for diagnosis
Odour inside cabinet	A. Rotting odour inside cabinet B. Oil or smokey odour	A. Clean the cabinet B. Turn off the cabinet and contact Bromic service immediately

10. MULTIPLEXING PROCEDURE

The multiplexing procedure can be used to connect multiple Bromic Semi Vertical units together.

- A Bromic multiplexing kit must be used for this procedure.
- The multiplexing procedure must be performed a licensed technician.

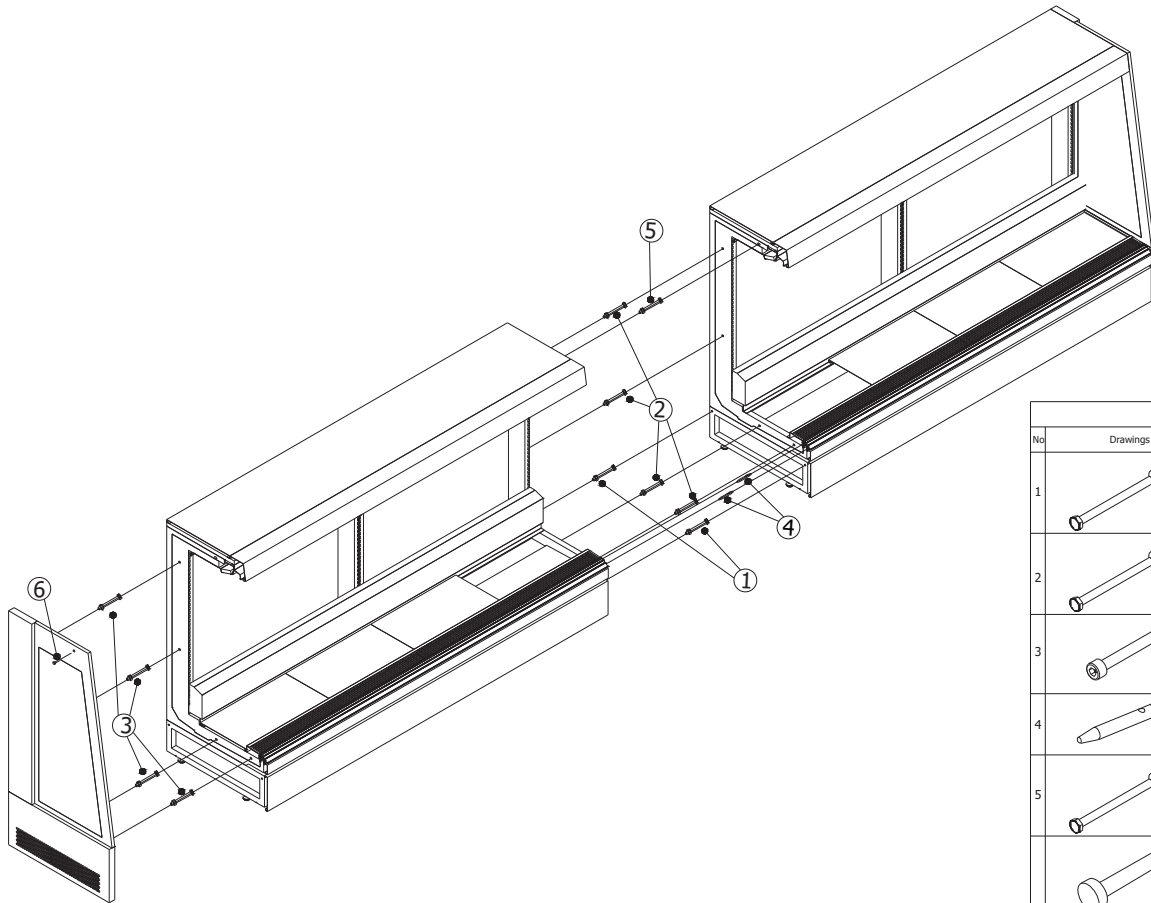

MULTIPLEXING (CABINET)			
No	Drawings	Parts	QTY
1		BOLT M8 x 120 WASHER M8 NUT M8	2
2		BOLT M8 x 100 WASHER M8 NUT M8	4
3		ALLEN BOLT M8 x 60 NUT M8	8
4		PIN Ø6 x 60	2
5		BOLT M8 x 170 WASHER M8 NUT M8	1
		BOLT M4 x 40	2

11. ALTERNATE CONFIGURATIONS

The Bromic Semi Vertical cabinet is available in alternate configurations upon special order. Contact your local Bromic sales representative for detailed information.

	Default Configuration	Alternate Configuration
Depth options	Thin version (790mm depth)	Wide version (930mm depth)
Door options	Hinged doors	Sliding doors Open-front (no doors)
Colour options	Black interior Black exterior Black door frame Black shelves Black bumper	Alternate colours available upon special order

Product Specification for alternate options

Dimensions (wide option)	Height, mm	1500	1500	1500	1500
	Width, mm	1018	1330	1955	2580
	Depth, mm	930	930	930	930
Net Volume	Litres	478	678	956	1275
Sliding Door (alternative option)	Solid/Glass	Glass	Glass	Glass	Glass
	Type	Sliding	Sliding	Sliding	Sliding
	Self-Closing	No	No	No	No
	Door Lock	No	No	No	No
Electrical Door (open-front option)	Voltage, V	230	230	230	230
	Frequency, Hz	50	50	50	50
	Nominal Power, W	816	1062	1625	2137
	Rated Current, A	3.55	4.62	7.07	9.29
	Fuse, A	16	16	16	16
	Energy Consumption	11.92	14.4	17.8	24

12. ENVIRONMENTAL AND DISPOSAL NOTES

These refrigerated cabinets are designed to high standards of environmental protection and recycling convenience. Cyclopentane, an environmentally friendly foaming agent, has been used. Cyclopentane is distinguished by zero ozone depletion potential (ODP) and zero global warming potential (GWP). The refrigerant used and contained within a hermetically tight circuit is environmentally friendly and does not contain chlorine and zero ODP.

The device must be disposed of in accordance with applicable regulations. The WEEE regulations must be observed.

In the interest of preventing environmental nuisance and promoting re-use of the high quality materials employed, used commercial refrigeration equipment must be collected for expert disposal and recycling. Therefore, observe the following disposal regulations:

- The cabinet must not be discarded with regular waste.
- The refrigeration circuit must not be damaged.
- Before disposal, make it unserviceable by disconnecting the power plug and cutting off the power cable.
- Consult your local authorities or authorised dealers for details of collection and disposal facilities.
- Children are often unable to recognise the dangers associated with commercial refrigeration equipment. Proper supervision must be maintained and children must be prevented from playing with discarded refrigerated cabinets.
- The refrigerant used in all appliances covered by this manual are flammable.



13. WARRANTY






All Bromic products are manufactured to the highest quality standard and are supported by our Extra Care Service Warranty, including guarantees against any material or workmanship defects; guarantees that cannot be excluded under Australian Consumer Law.




Warranty Terms vary across the range. Please ensure you are familiar with the Terms and Conditions that apply to the purchase of your Bromic product by referring to the Warranty Policy included with your purchased product.

Alternatively, you can also download the Warranty Policy at <https://bromicrefrigeration.com.au/extra-care-warranty>

HOW TO PLACE A SERVICE REQUEST

- Please call 1300 276 642 to place a warranty service request and let the operator know whether you need Priority A or B service. More information can be found below.
- Ensure you have the serial number of your product ready before contacting us.
- The serial number of your product can be found on a compliance plate located on the inside right and at the rear of your cabinet.

P/N#3735161-NR			
Serial number:	Model:		
	UC0650SD-NR		
ST21113A01GH65T004	Digital Thermostat Ventilated		
Description	Power:		
CHILLER UC0650SD-NR	AC220-240V 50Hz 1Ph		
UPRIGHT 1DR 650L S/S	MADE IN CHINA		

BROMIC REFRIGERATION			
Serial no.:	ST21113A01GH65T004		
Climatic classification:	4	Insulation Blowing Gas	C5H10
Bromic Model:	UC0650SD-NR	g	120
Bromic Part no.:	3735161-NR	Hz	50
Refrigerant type:	R290		
Rated Voltage:	AC220~240V	MADE IN CHINA	
Rated current:	3.0A		
Net Weight:	135Kg		
Rated Wattage:	305W		
Max Lamp Wattage:	1.5W		

Compliance Plate Example 1

SERVICE REQUEST PRIORITY



PRIORITY A SERVICE

When the unit is **NOT** performing its primary function such as cooling or heating, or presents an OH&S or food safety risk



PRIORITY B SERVICE

When the unit is performing its primary function, and presents no OH&S or food safety risk. i.e. lights, gaskets, locks, door adjustment



SERVICE CALL PLACED BEFORE MIDDAY

Priority A - Technician to attend site within 4 hours
Priority B - Technician to attend site within 8 business hours



SERVICE CALL PLACED AFTER MIDDAY

Priority A - Technician attends site before midday on the following business day
Priority B - Technician attends site before 4pm on the following business day

BROMIC REFRIGERATION

10 Phiney Place, Ingleburn (Sydney)
NSW 2565 Australia
T. 1300 276 642

For further product information
bromicrefrigeration.com.au